 




barricadeTM

Operational & maintenance manual

Suitable for: BAR1

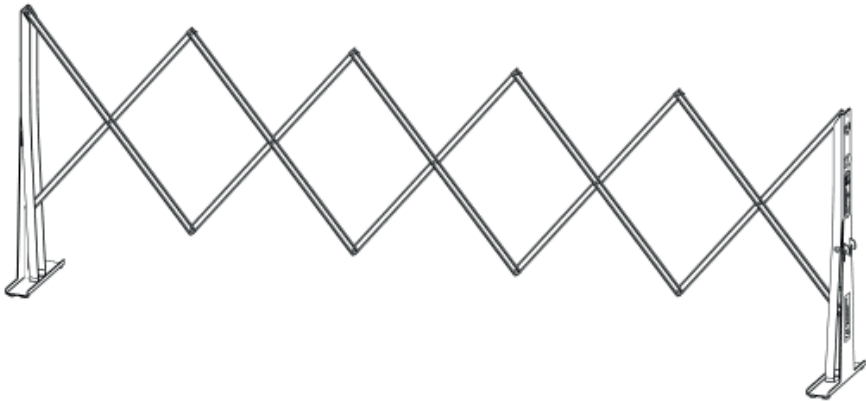



Welcome

Welcome to your Armorgard Barricade, a highly visible and easy-to-deploy safety barrier. Please consult this manual for instructions on how to get the most from the unit.

Please read this user manual carefully prior to using your Barricade.

Contents

Safety information.....	4
Product specification.....	5
What's included.....	6
Tools you'll need.....	7
Getting to know your Barricade™.....	8
How to use.....	9
Storing the unit.....	10
Transporting the unit.....	12
Equipment care.....	13
Ongoing maintenance.....	13
Warranty.....	14
Notes.....	15



Safety information

- » Always check general product condition before use. If in doubt, contact a representative of Armorgard.
- » Barricade is not tested or intended to withstand impact by any vehicle, to support or provide control of the public or for the containment of bulk materials.
- » Ensure a risk assessment is carried out before use.
- » All installed systems should be checked at regular intervals by a competent person to ensure its continued integrity and that there are no signs of any potential failing.
- » Please ensure any defective product identified during inspection is replaced immediately.
- » Ensure that all Barricades are deployed in suitable locations.
- » If in doubt, cease work and use additional protective measures as required.
- » Always check your surroundings for potential hazards before deploying the Barricade.
- » Items should not be fixed to the Barricade as this could affect its stability.
- » Be careful of finger traps near moving parts.

Whilst every effort has been made to ensure this operational and maintenance manual covers every aspect needed to operate your product safely, please take care whilst using the product and always operate with caution. Always liaise with management personnel on site for any additional operational restrictions that you need to be aware of.

Do	Don't
✓ Carry out risk assessments	✗ Misuse the Barricade
✓ Replace damaged parts	✗ Use if damaged
✓ Be careful when opening and closing	✗ Trap fingers in unit
✓ Use to mark out areas of safety	✗ Fix items to the Barricade

Product specification

Product code	Description	Weight (kg)	External dimensions W x D x H (mm)	Internal dimensions W x D x H (mm)
BAR1	Barricade	8	2525 x 300 x 830	140 x 300 x 830



What's included...



1x Barricade

Tools you'll need...




One person
needed



Getting to know your barricade™

A highly visible and easy-to-deploy safety barrier.

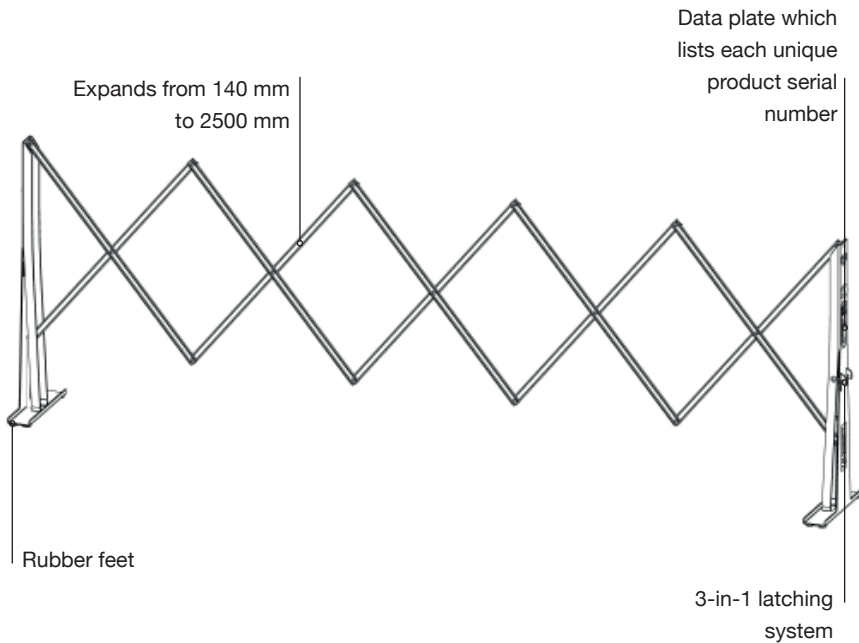

Collapsible



No detachable parts




Suitable for on site use


How to use



- 1.** The Barricade has a latch that also functions as a carry handle when the Barricade is retracted and latched.

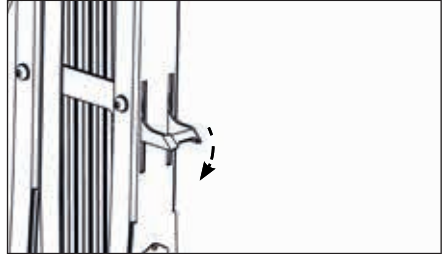


- 2.** To latch or unlatch the Barricade, simply press the handle down, which then releases the catch.

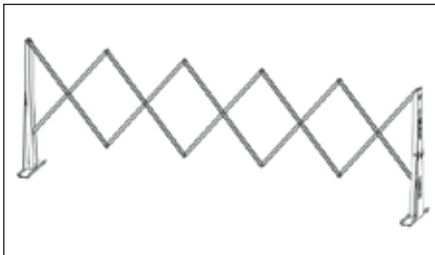


- 3.** The Barricade can then be extended.



Storing the unit

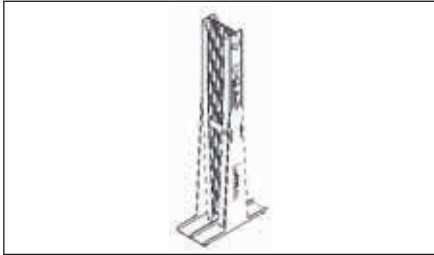

- 1.** Save space when storing the unit by folding it together and using the latching system.

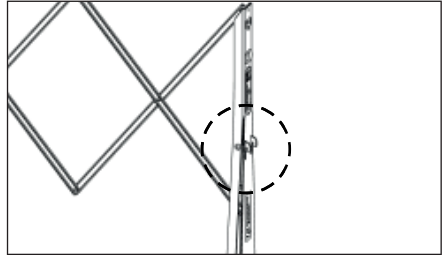


- 2.** To use the latch, fold the Barricade and fit the latch into the holes.



- 3.** Always make sure the Barricade is folded and latched during transport and storage.



- 4.** The carry handle is also used to connect multiple Barricades. Line up two Barricades with the handles pointing in one direction. Lift the end with no handle over the handle of the other Barricade.

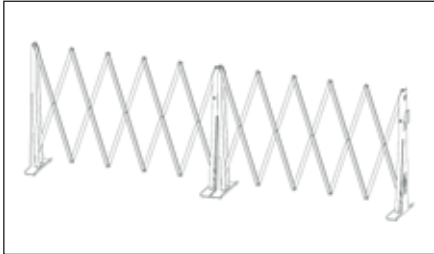


- 5.** The Barricade will drop into place, forming a link that is robust enough to enable multiple connected Barricades to act as one.




Transporting the unit

The design of the Barricade makes transporting the product easy.

The three in one latching system enables the Barricade to be held folded whilst in transit. The unit can be safely lifted by one person. Please always take care when moving the Barricade.

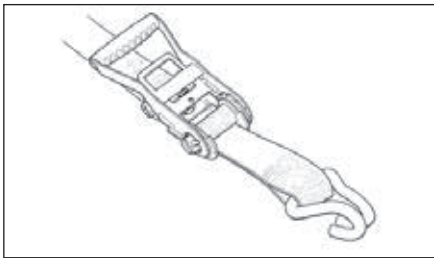

- 1.** During transportation, ensure the Barricade is secured to the carrier using straps or other measures.

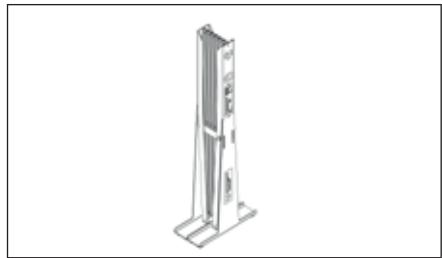

- 2.** In transport, always ensure the Barricade is folded and latched.

Equipment care

The Barricade is weatherproof and finished with a durable powder coating, so it is suitable for outdoor use, however it does not mean it is waterproof.

Always ensure that the product data plate remains visible and in good condition, especially the unique serial number.

Ongoing maintenance

It is important to check that the Barricade is not damaged before every use.

We recommend for you to check the latch, rivets and bars every three months, to ensure that the Barricade can operate fully. If the Barricade will be under rigorous use, we recommend integrity checking regularly.

Always carry out integrity checks before lifting or transporting the unit.



Warranty

Armorgard products are built to last, and all have a manufacturer's warranty of 12 months - please refer to the terms and conditions for what this covers.

Do not misuse the product, as this could affect the warranty. Always contact us if you require any additional support in using the product.



For additional support and easy access to spare or replacement parts, register your product following the QR code:



Notes



Find us on social media:



UK Head Office

Unit 14-16 Standard Way, Fareham Industrial Park, Fareham, Hampshire PO16 8XB
+44 (0)23 9238 0280 | sales@armorgard.co.uk | www.armorgard.co.uk

France Office

+ 33 (0)4 81 16 06 69
commercial@armorgard.fr
www.armorgard.fr

Australia Office

+61 1300 131 751
sales@armorgard.com.au
www.armorgard.com.au

New Zealand Office

0800 826 828
sales@armorgard.co.nz
www.armorgard.co.nz